

# Daily Floor Maintenance Cleaning Process



## You'll Need:

1. A dual compartment mop bucket system with a quality mop & side wringer.\*
2. EnviroX LVT Renew™
3. EnviroX LVT Renew™ Dispenser
4. Medium duty deck brush

*\* When used as directed, LVT Renew™ works effectively with most mopping systems. For best results, a flat microfiber mop and split bucket system is recommended.*

## 1. Prepare

In front compartment of a dual compartment bucket, dispense EnviroX LVT Renew™ **Light Duty Green®** dilution. Fill second compartment with clean cold water.



## 2. Mopping

With a mop, begin mopping floor with EnviroX LVT Renew™ **Light Duty Green®** dilution. Make sure mopping is done in the direction of the floor grain and in an "S" motion with a light touch.

*When used as directed, LVT Renew™ works effectively with most mopping systems. For best results, a flat microfiber mop and split bucket system is recommended.*



## 3. Repeat

After mopping a 6' x 10' (60 sq. ft.) area, rinse the mop in the clean water compartment & wring out. Rewet mop with LVT Renew™ **Light Duty Green®** dilution and wring out. Repeat steps 2 and 3 until entire floor has been mopped.

## 4. Refill

If the cleaning solution section of the mop bucket becomes empty, dump out remaining contents in both sections and refresh each compartment appropriately.

## 5. Air Dry

Let the floor air dry. The floor should be visibly dry and dry to the touch within 5-10 minutes.

# Detailed Daily Floor Maintenance Cleaning Process

## **Please follow steps in order:**

1. If using a microfiber mopping system, attach the microfiber mop to the mop frame.
2. Dispense into the front compartment of dual compartment bucket the EnviroX LVT Renew™ **Light Duty Green**® dilution. Do this by pressing and holding the **Light Duty Green**® button on the EnviroX LVT Renew™ Dispenser until the 2-gallon mark is reached.
3. Fill rear compartment with 2 gallons of clean cold water.
4. Begin mopping at the furthest point from the facility exit.
5. Saturate mop head in front compartment cleaning solution and wring out thoroughly.
6. Ensure mopping is done in the direction of the flooring texture (with the grain) in an “S” motion with a light touch, just like laying floor finish.
7. Mops clean by friction so you will feel some resistance while using the mop. After mopping a 6' x 10' (60 sq. ft.) area, rinse mop head in the water compartment of dual compartment bucket, wring mop out, and then rewet in cleaning solution. Wring thoroughly.
8. Repeat this process until the entire floor of the entire area has been mopped and cleaned.
9. When cleaning solution section (the front compartment of bucket) is empty, dump out contents of both sections (front & back sections) and refresh each per above steps.
10. Always back yourself out of the room by starting to mop the floor at a point furthest from exit door.
11. Let the floor air-dry. The floor should be visibly dry and dry to the touch within 5-10 minutes.
12. Upon completion of mopping rinse mop in clean water and let air dry. If mop heads are heavily soiled, soak in LVT Renew™ **Heavy Duty Red**® dilution no less than 10 minutes, rinse clean and let air dry.

## **Questions?**

Call 1-800-281-9604 or visit [enviroxclean.com](http://enviroxclean.com)



ACW-119-1